



User Manual

4G Multi-Connect PoE Modem

DWM-314-TP

4G Multi-Connect PoE Modem

Chapter 1 Introduction	4
1.1 Introduction	4
1.2 Contents List.....	5
1.2.1 Package Contents	5
1.3 Hardware Configuration	6
1.4 LED Indication	8
1.5 Installation& Maintenance Notice.....	9
1.5.1 System Requirements	9
1.5.2 Warning	9
1.5.3 Hot Surface Caution.....	11
1.5.4 Product Information for CE RED Requirements.....	12
1.6 Hardware Installation.....	13
1.6.1 Mount the Unit.....	13
1.6.2 Insert the SIM Card	13
1.6.3 Connecting to the Network or a Host.....	14
1.6.4 Setup by Configuring WEB UI.....	14
Chapter 2 Status.....	15
2.1 Cellular	15
2.1.1 Network.....	15
2.1.2 Modem.....	16
2.1.3 Signal	19
2.1.4 Data Usage.....	20
2.2 Network.....	20
2.2.1 Client List.....	20
2.3 Security.....	21
2.3.1 VPN.....	21
2.4 DashBoard.....	23
2.4.1 PD Status.....	23
Chapter 3 Setup	24
3.1 Network.....	24
3.1.1 Cellular	25
3.1.2 Ethernet	27

4G Multi-Connect PoE Modem

3.1.3 Port Forwarding	29
3.1.4 DDNS	32
3.1.5 PoE.....	33
3.2 Routing.....	35
3.2.1 Static Routing	35
3.2.2 Routing Information	36
3.3 System.....	37
3.3.1 System Time.....	38
3.3.2 Language.....	39
3.3.3 System Information	39
3.3.4 Scheduling	39
3.3.5 Data Cap	41
Chapter 4 Security	42
4.1 VPN	42
4.1.1 OpenVPN	42
4.2 Firewall.....	45
4.2.1 Packet Filters	45
4.2.2 MAC Control.....	48
4.2.3 IPS	50
Chapter 5 Administrator	52
5.1 Manager.....	52
5.1.1 FW Upgrade.....	52
5.1.2 Password & MMI	53
5.1.3 Reboot & Reset	54
5.1.4 SSH	55
5.1.5 Remote Administrator.....	55
5.1.6 Device Management	56
5.2 Utility.....	57
5.2.1 SMS.....	57
5.2.2 Command Script.....	61

Chapter 1 Introduction

1.1 Introduction

Congratulations on your purchase of D-Link DWM-314-TP 4G Multi-Connect PoE Modem. With this D-Link 4G Multi-Connect PoE Modem you have made a great first step in the world of connected Internet of things (IoT) by simply inserting a SIM card from the local mobile carrier into this device to get things connected. This section gives you all the information you need to set up your device.

Main Features:

- Provide 3G/4G WAN connection
- Provide four Fast Ethernet ports for the LAN connection (2 ports with 802.3at PSE function)
- Instinctive Web GUI is used for basic setting and check the cellular status.
- Designed easy-to-mount metal body for business and M2M environment to work with a variety of M2M (Machine-to-Machine) applications.

Before you install and use this product, please read this manual in detail for fully exploiting the functions of this product.

4G Multi-Connect PoE Modem

1.2 Contents List

1.2.1 Package Contents


#Standard Package

Items	Description	Contents	Quantity
1	DWM-314-TP 4G Multi-Connect PoE Modem		1pc
2	Cellular Antenna		2pcs
3	RJ45 Cable		1pc
4	2 Pin Terminal Block		1pc
5	Power Adapter (54V/1.67A)		1pc
6	Power cord		1pc
7	DIN-Rail Bracket		1 set (DIN rail: screw x3)

4G Multi-Connect PoE Modem

1.3 Hardware Configuration

➤ FrontView

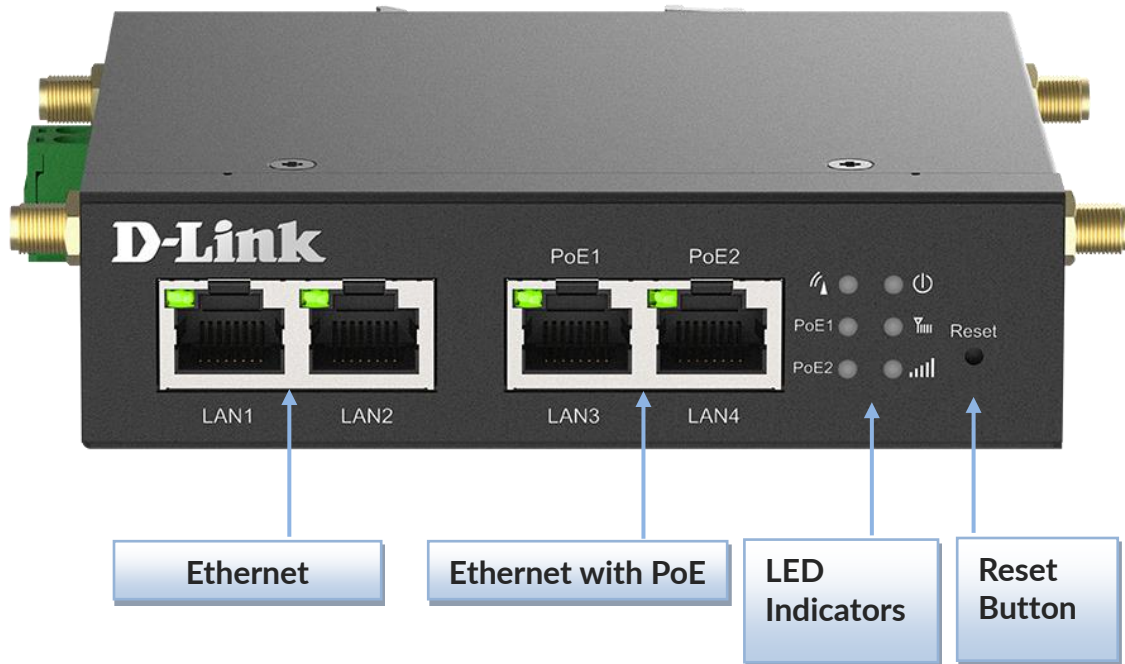


※Reset Button


RESET button provides user a quick and easy way to resort the default setting. Press the RESET button continuously for more than 8 seconds when the 3G/LTE LED (blue and Flash) flashes alternately for 3~4 seconds, and then release it. The device will restore to factory default settings.

4G Multi-Connect PoE Modem

➤ RightView

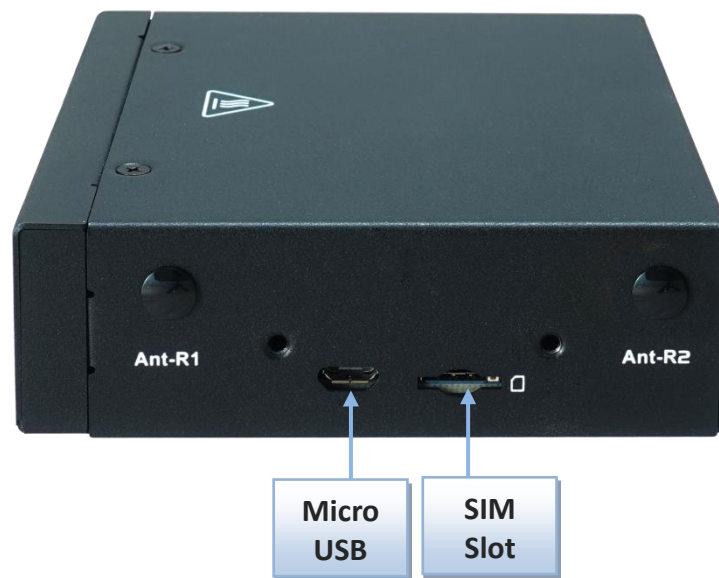

➤ Left View

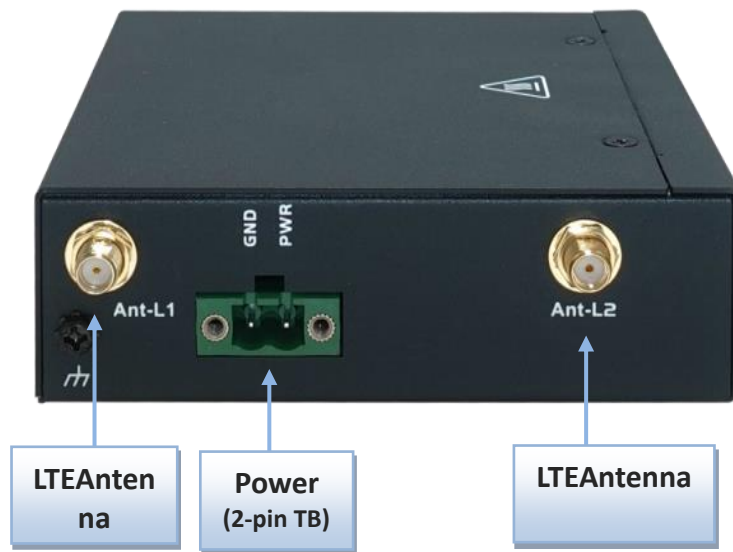


※System Port (Micro USB)

The System port on the DWM-314-TP is exclusively reserved for RD internal debugging. Connecting a Micro USB cable to this port will not activate any functions or provide access to the device's system.

4G Multi-Connect PoE Modem

1.4 LED Indication

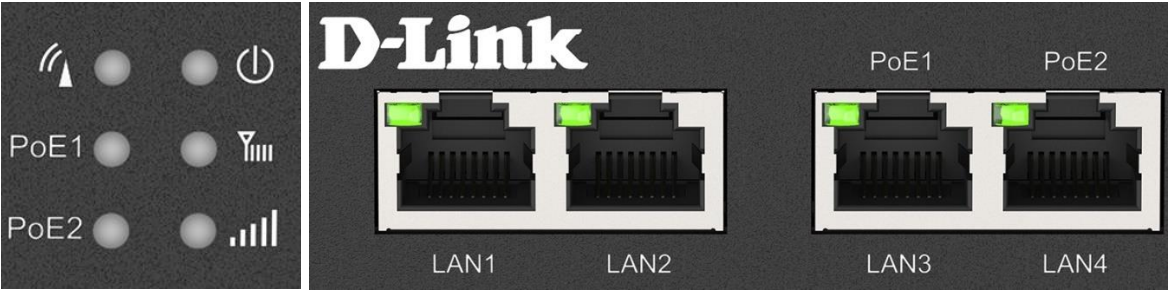

Indication	LEDColor	Description
 Power	Blue	Steady On: Device power is on Off: Device power is off
 Cellular	Blue	Blue and Steady On: Cellular is registering to network. Blue and Flash: Cellular is not registered to network.
 Signal Strength	Blue	Blue and Steady On: Cellular signal is good. Blue and Slow Flash: Cellular signal is weak. OFF: No cellular signal.
PoE1   PoE2 PoE 1 ~ 2	Blue	Steady On: Supply PoE Power to Ethernet Port. Off: No PoE Power to Ethernet Port.
LAN1~4 (in RJ45 port)	Green	Green and Steady On: An Ethernet device is connected. Green and Flash: Data transmission through Ethernet.

4G Multi-Connect PoE Modem

1.5 Installation& Maintenance Notice

1.5.1 System Requirements

Network Requirements	• AnEthernet RJ45cable • 4G cellular service subscription • Ethernet adapter on PC
Web-based Configuration Utility Requirements	Computer with the following: • Windows®, Macintosh, or Linux-based operating system • An installed Ethernet adapter Browser Requirements: • Microsoft Edge 119 or higher • Chrome 73 or higher • Firefox 60.0 or higher

1.5.2 Warning



Attention

- DC 54V/1.67A power adapters are recommended.
- Do not open or repair the case yourself. If the product is too hot, turn off the power immediately and have it repaired at a qualified service center.
- Place the product on a stable surface and avoid using this product and accessories outdoors.

4G Multi-Connect PoE Modem

Federal Communication Commission Interference Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this equipment.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FOR PORTABLE DEVICE USAGE (<20m from body/SAR needed)

Radiation Exposure Statement:

The product complies with the FCC portable RF exposure limit set forth for an uncontrolled environment and are safe for intended operation as described in this manual. The further RF exposure reduction can be achieved if the product can be kept as far as possible from the user body or set the device to lower output power if such function is available.

FOR MOBILE DEVICE USAGE (>20cm/low power)

Radiation Exposure Statement:

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

FOR COUNTRY CODE SELECTION USAGE (WLAN DEVICES)

Note: The country code selection is for non-US model only and is not available to all US model. Per FCC regulation, all WiFi product marketed in US must be fixed to US operation channels only.

4G Multi-Connect PoE Modem

1.5.3 Hot Surface Caution



CAUTION: The surface temperature for the metallic enclosure can be very high! Especially after operating for a long time, installed at a closed cabinet without air conditioning support, or in a high ambient temperature space.

DO NOT touch the hot surface while servicing!!

4G Multi-Connect PoE Modem

1.5.4 Product Information for CE RED Requirements

The following product information is required to be presented in product User Manual for latest CE RED requirements.¹

(1) Frequency Band & Maximum Power

1.a Frequency Band for Cellular Connection (for EC25-EU version)

Band number	Operating Frequency	Max output power
LTE FDD BAND 1	Uplink:1920-1980 MHz Downlink:2110-2170 MHz	23.1dBm
LTE FDD BAND 3	Uplink:1710-1785 MHz Downlink:1805-1880 MHz	23.0dBm
LTE FDD BAND 7	Uplink:2500-2570 MHz Downlink:2620-2690 MHz	22.8dBm
LTE FDD BAND 8	Uplink:880-915 MHz Downlink:925-960 MHz	23.2dBm
LTE FDD BAND 20	Uplink:832-862 MHz Downlink:791-821 MHz	23.5dBm
LTE FDD BAND 28A	Uplink: 704 -723 MHz Downlink: 759 -778MHz	23dBm
LTE FDD BAND 38	Uplink: 2570-2620 MHz Downlink: 2570-2620 MHz	21.7dBm
LTE FDD BAND 40	Uplink: 2300-2400 MHz Downlink: 2300-2400 MHz	21.5dBm
WCDMA BAND 1	Uplink:1920-1980 MHz Downlink:2110-2170 MHz	23.3dBm
WCDMA BAND 8	Uplink:880-915 MHz Downlink:925-960 MHz	
E-GSM	Uplink:880-915 MHz Downlink:925-960 MHz	32.9 dBm
DCS	Uplink:1710-1785 MHz Downlink:1805-1880 MHz	29.9 dBm

¹ The information presented in this section is ONLY valid for the EU/EFTA regional version. For those non-CE/EFTA versions, please refer to the corresponding product specification.

4G Multi-Connect PoE Modem

1.6 Hardware Installation

This chapter describes how to install and configure the hardware

1.6.1 Mount the Unit

The DWM-314 series can be placed on a desktop, or use extender to place on DIN-Rail bracket or mount on the wall.


1.6.2 Insert the SIM Card

WARNING: BEFORE INSERTING OR CHANGING THE SIM CARD, PLEASE MAKE SURE THAT POWER OF THE DEVICE IS SWITCHED OFF.

SIM card slot is located in the right side of DWM-314 series. You need to unscrew and remove the outer SIM card cover before installing or removing an inserted SIM card. Please follow below instructions to install or remove SIM card. After SIM card is well installed or removed, screw back the outer SIM card cover.

Step 1:

Loosen the screws as below and remove the SIM cover.

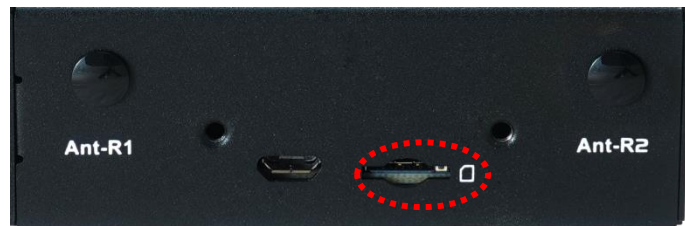

Step 2:

Push the SIM card into the SIM slot.



Step 3:

Push the inserted SIM card again to reject it from the SIM slot.



4G Multi-Connect PoE Modem

 
1.6.3 Connecting to the Network or a Host

The DWM-314 series provides four RJ45 ports to connect to 10/100Mbps Ethernet. It can auto detect the transmission speed on the network and configure itself automatically. Connect the Ethernet cable to the RJ45 port (LAN) of the device and plug another end of the Ethernet cable into your computer's network port to connect this device to the host PC for device configuration.


1.6.4 Setup by Configuring WEB UI

You can browse web UI to configure the device.

Type in the IP Address (<http://192.168.0.1>)²



When you see the login page, enter the user name and password and then click '**Login**' button.

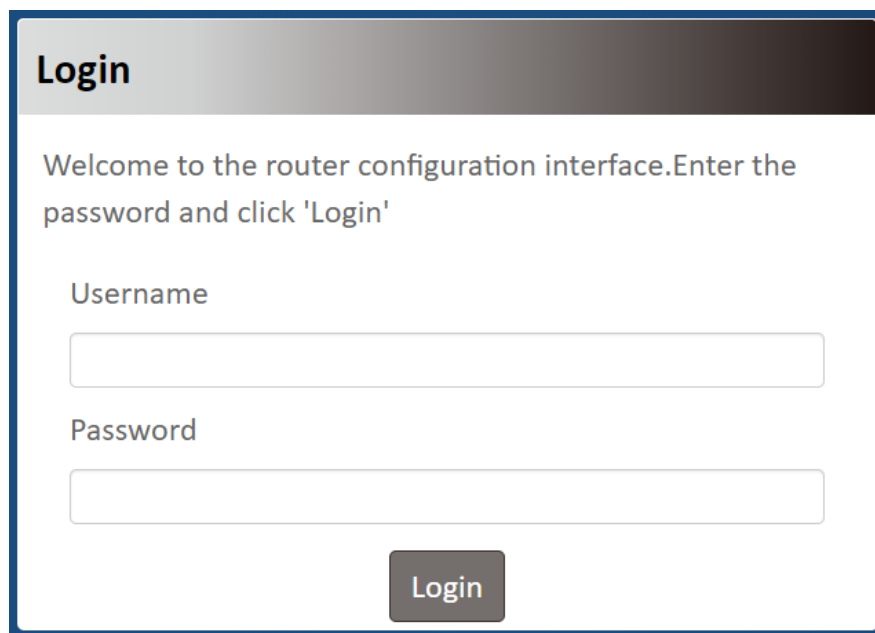A screenshot of a web-based login interface for a router. The page has a dark grey header with the word 'Login' in white. Below the header, the text 'Welcome to the router configuration interface. Enter the password and click 'Login'' is displayed. There are two input fields: one labeled 'Username' and another labeled 'Password'. Both fields are empty. At the bottom center of the form is a dark grey button with the word 'Login' in white.

The default setting for both username and password is '**admin**'³.

2. The default LAN IP address of this gateway is 192.168.0.1 , If you change it, you need to login by using the new IP address.

3. For security concern, the login process will force user to change default password at the first time.

Chapter 2 Status

2.1 Cellular

Status

Cellular

Network

Security

DashBoard

Setup

Security

Administrator

Logout

Network

Modem

Signal

Data Usage

IPv4 Network

Mode	NAT
Link Status	Connected 0 day 0:35:7
IP Address	25.92.200.23
Netmask	255.255.255.240
Gateway	25.92.200.24

2.1.1 Network

Network

Modem

Signal

Data Usage

IPv4 Network

Mode	NAT
Link Status	Connected 0 day 0:26:18
IP Address	100.120.108.6
Netmask	255.255.255.252
Gateway	100.120.108.5

Network Page	
Item	Description
Mode	Network type NAT
Link Status	Display cellular network statusconnected or disconnected and Connetion Time.
Ip address	Base station distribution network ip
Netmask	Display cellular network netmask
Gateway	Display cellular network gateway

4G Multi-Connect PoE Modem

2.1.2 Modem

NetworkModemSignalData Usage

Modem Information

IMEI

864303056073243

Advanced Information

Advanced

Service Information

SIM

SIM-A

SIM Status

Ready

Register Status

Registered

Operator

Chunghwa Telecom

Service Type

LTE

Band

Band 7

Advanced Information

Advanced

Modem information Page	
Item	Description
IMEI	Display modem IMEI information
Advanced Information	Click“advanced”button to show Advanced Information

Advanced information

IMEI

864303054321859

Temperature

50 °C

Band Capability

B1,B3,B7,B8,B20,B28,B38,B40,B41

Close

Advanced Information Page	
Item	Description
IMEI	Display modem IMEI information
Temperature	Module temperature
4G Band capability	4G support band

4G Multi-Connect PoE Modem

Service Information	
SIM	SIM-A
SIM Status	Ready
Register Status	Registered
Operator	Chunghwa Telecom
Service Type	LTE
Band	Band 7
Advanced Information	Advanced

Service information Page	
Item	Description
Sim	Display card slot
Sim status	Displayread sim status
Register status	Display base station registration statusregistered or not register
Operator	Operator name
Service type	Displaycorresponding types of network signals
Band	Connected frequency band
Advanced Information	Click“advanced”button to show Advanced Information

4G Multi-Connect PoE Modem

Advanced information

MCC	466
MNC	92
Roaming	No
Cell ID	965E40E
Band	Band 7
LAC	0
TAC	36400

Close

Advanced Information Page	
Item	Description
MCC	Display MCC information
MNC	Display MNC information
Roaming	Roaming status no or roaming
Cell ID	Cell ID
Band	Connected frequency band
LAC	Location Area Code
TAC	Tracking Area Number

4G Multi-Connect PoE Modem

2.1.3 Signal

Network	Modem	Signal	Data Usage
Cellular Signal			
Service Type		LTE	
Operator		Chunghwa Telecom	
RSSI		-71	
Advanced Information		Advanced	

CellularSignal Page	
Item	Description
Service type	Display corresponding types of network signals.
Operator	Operator name
RSSI	Display Received Signal
Advanced Information	Click "advanced" button to show Advanced Information

Advanced information	
RSSI	-59
RSRP	-90
RSRQ	-12
SINR	1.70
RSCP	0
ECIO	0

Close

Advanced Information Page	
Item	Description
RSSI	Display Received Signal
RSRP	Display Signal ReceivedPower
RSRQ	Display Signal ReceivedQuality
SINR	Display Interference Strength
RSCP	Display SignalReceivedPower
ECIO	Display interferenceRatio

4G Multi-Connect PoE Modem

2.1.4 Data Usage

Status

CellularNetworkSecurityDashBoard

NetworkModemSignalData Usage

Traffic Statistics

Traffic StatisticsDatacap is disabled

Advanced Information Page	
Item	Description
Traffic Statistics	Display Traffic Statistics information

2.2 Network

2.2.1 Client List

Status

CellularNetworkSecurityDashBoard

Client List

Client List

192.168.13.10Detail

Go to **Status >Network > Client List** tab.
The **Client List** shows you the IP address, Host Name, MAC Address of each device that is connected to this gateway.

Client List


IP Address	192.168.13.10
Host Name	DESKTOP-31T83VD
MAC Address	d4-5d-64-67-7f-8a

Close

4G Multi-Connect PoE Modem

LAN Client List		
Item	Value setting	Description
IP Address	N/A	Client record of IP Address Type and the IP Address. Type is String Format and the IP Address is IPv4 Format.
Host Name	N/A	Client record of Host Name. String Format.
MAC Address	N/A	Client record of MAC Address. MAC Address Format.

2.3 Security

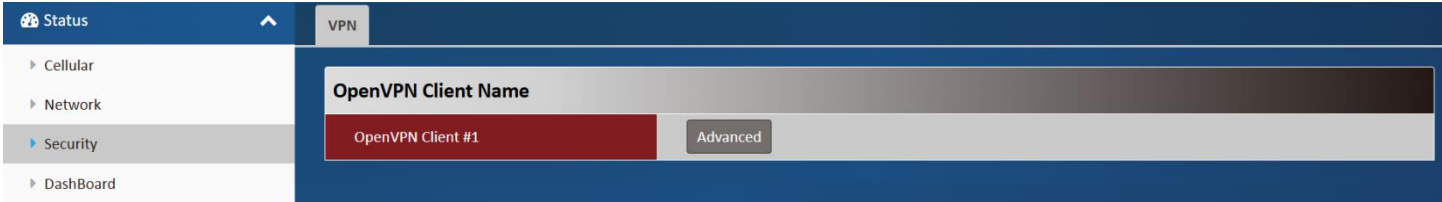

2.3.1 VPN



Openvpn client name Page	
Item	Description
Openvpn client #1	Click "advanced" button to show Advanced Information

4G Multi-Connect PoE Modem

Advanced Information	
OpenVPN Client Name	OpenVPN Client #1
Remote IP/FQDN	122.146.196.220
Remote Subnet	192.168.218.0 / 24
Virtual IP	0.0.0.0
Conn.Time	00:00:00:00
Conn.Status	Disconnected

Close

Advanced Information Page	
Item	Description
Openvpn client name	VpnClient name
Remote ip/FQDN	Vpn server ip or FQDN
Remote subnet	Vpn server remote subnet
Virtual ip	Vpn virtual ip
Conn.time	Displayconnected time
Conn.status	Displayconnected or disconnected

4G Multi-Connect PoE Modem

2.4 DashBoard

Status

Cellular

Network

Security

DashBoard

Setup

Security

Administrator

Logout

PoE Status

PoE Port1

Power Output	OFF
PD Classification	N/A (Power Off)
Voltage (V)	0.0
Current (mA)	0
Consumption (Watts)	0.00

PoE Port2

Power Output	OFF
PD Classification	N/A (Power Off)
Voltage (V)	0.0
Current (mA)	0
Consumption (Watts)	0.00

2.4.1 PD Status

PoE Status

PoE Port1	
Power Output	ON
PD Classification	PD Classification 0 (Default)
Voltage (V)	46.8
Current (mA)	92
Consumption (Watts)	4.31

PoE Port2	
Power Output	OFF
PD Classification	N/A (Power Off)
Voltage (V)	0.0
Current (mA)	0
Consumption (Watts)	0.00

Chapter 3 Setup

The DWM-314 series connect to a machine via the Ethernet interface for 3G/4G network connection.DWM-314 series also provides another function with NAT router. It can help the network application more flexible.

3.1 Network

Status

Setup

Network

Routing

System

Security

Administrator

Logout

Cellular

Ethernet

Port Forwarding

DDNS

PoE

Cellular Access

Network Type

Auto

APN

Manual

Manual APN

Username

Password

Authentication

Auto

IP Type

IPv4

IP Mode

Dynamic IP

Static IP Config

PIN Code

Roaming

☐ Enable

MTU Setup

☐ Enable

(68~1500)

Keep Alive

☐ Enable

IP Address: 8.8.8.8

Interval: 60

(2~14400 seconds)

Discard Ping from WAN

☐ Enable

Save

Network Item	Description
Cellular	Set the parameter for cellular network.
Ethernet	Set the IP of Ethernet and DHCP service
Port Forwarding	Enable specified port or protocol for service on connected device.
DDNS	Register a dynamic host name for the unit.
PoE	The PoE port management function includes PoE port control, PD failure check and Power Off/On by schedule.

4G Multi-Connect PoE Modem

3.1.1 Cellular

Status

Setup

Network

Routing

System

Security

Administrator

Logout

Cellular

Ethernet

Port Forwarding

DDNS

PoE

Cellular Access

Network Type

Auto

APN

Manual

Manual APN

Username

Password

Authentication

Auto

IP Type

IPv4

IP Mode

Dynamic IP

Static IP Config

PIN Code

Roaming

☐ Enable

MTU Setup

☐ Enable

(68~1500)

Keep Alive

☐ Enable

IP Address: 8.8.8.8

Interval: 60

(2~14400 seconds)

Discard Ping from WAN

☐ Enable

Save

Cellular Access Item	Value setting	Description
Network Type	1. A must-fill setting 2. By default Auto is selected	3G/LTE
APN	1. A must-fill setting 2. By default Auto is selected	Auto The unit will detect the SIM and set an APN from internal database. Manual User must set APN manually.
Manual APN	1. A must-fill setting 2. String format : any text	Enter the APN you want to use to establish the connection. This is a must-fill setting if you selected Manual APN as APN scheme.
Username	1. An optional setting 2. String format : any text	Enter the optional Username settings if your ISP provided such settings to you.
Password	1. An optional setting 2. String format : any text	Enter the optional Password settings if your ISP provided such settings to you.
Authentication	1. A Must-fill setting 2. By default Auto is	Select PAP (Password Authentication Protocol) and use such protocol to be authenticated with the carrier's server.

4G Multi-Connect PoE Modem

	selected	Select CHAP (Challenge Handshake Authentication Protocol) and use such protocol to be authenticated with the carrier's server. When Auto is selected, it means it will authenticate with the server either PAP or CHAP .
IP Type	1. A must-fill setting 2. By default IPv4 is selected	Specify the IP type of the network service provided by your 3G/4G network. It can be IPv4 , IPv6 , or IPv4v6 .
IP Mode	1. A must-fill setting 2. By default Dynamic IP is selected	Dynamic IP The unit will get IP from cellular service.. Static IP The unit will set IP according to Static IP Config .
PIN Code	1. An optional setting 2. String format : interger	If the PIN (Personal Identification Number) code is required to unlock your SIM card, enter the PIN code you set.
Roaming	1. An optional setting 2. Uncheck by default	Check the checkbox to enable the modem to connect on the cellular network at roaming state.
MTU Setup	1. An optional setting 2. Uncheck by default	Check the Enable box to enable the MTU (Maximum Transmission Unit) limit, and specify the MTU for the 3G/4G connection. MTU refers to Maximum Transmission Unit. It specifies the largest packet size permitted for Internet transmission. Value Range: 68 ~ 1500.
Keep Alive	1. An optional setting 2. Box is unchecked by default	Check the Enable box to activate the keep-alive function. Input IP Address and interval to send an ICMP packet to check the network status.
Discard Ping from WAN	1. An optional setting 2. Uncheck by default	The modem will not respond the ICMP request packet from remote hosts when the checkbox is checked.

Static IP Configuration

IP	0.0.0.0	
Subnet Mask	255.255.255.0 (/24)	▼
Default Gateway	0.0.0.0	(Optional)
Primary DNS	0.0.0.0	(Optional)
Secondary DNS	0.0.0.0	(Optional)

Save

Close

4G Multi-Connect PoE Modem

Static IP Configuration		
Item	Value setting	Description
IP	1. IPv4 format. 2. A Must-fill setting	The Static IP Address setting of this unit.
Subnet Mask	255.255.255.0 (/24) is set by default	TheSubnetMask of this configed static IP.
Default Gateway	1. IPv4 format. 2. An optional setting	Thegateway settingofthisconfiged static IP.
Primary DNS	1. IPv4 format. 2. An optional setting	Assigned DNS server of this configed static IP.
Secondary DNS	1. IPv4 format. 2. An optional setting	Assigned DNS server of this configed static IP.

3.1.2 Ethernet

Cellular
Ethernet
Port Forwarding
DDNS
PoE

Ethernet IP

IP	192.168.123.254
Netmask	255.255.255.0 (/24) ▼
DHCP Server	☒ Enable
DHCP Setting	DHCP Config

Save

Ethernet IP		
Item	Value setting	Description
IP	1. IPv4 format. 2. A Must-fill setting	The LAN IP Address of this unit.
Netmask	255.255.255.0 (/24) is set by default	The Subnet Mask of this unit.
DHCP Server	The box is unchecked by default.	Click Enable box to activate DHCP Server.
DHCP Setting	N/A	Click DHCP Config button to pop-up the DHCP Setting page.

4G Multi-Connect PoE Modem

DHCP Setting

IP Pool Start	5
IP Pool End	10
Lease Time	3600

Save


Close

DHCP Setting Item	Value setting	Description
IP Pool Start	1. numericstring format. 2. A must-fill setting	The IP Pool of this DHCP Server. It is Starting Address entered in this field.
IP Pool End	1. numeric string format. 2. A must-fill setting	The IP Pool of this DHCP Server. It is Ending Address entered in this field.
Lease Time	1. numeric string format. 2. A must-fill setting	The Lease Time of this DHCP Server. <u>ValueRange:</u> 300 ~ 604800 seconds.

4G Multi-Connect PoE Modem

3.1.3 Port Forwarding

"Virtual Server" allows you to access servers with the global IP address of the gateway as if they are servers existed in the Internet. The gateway serves the service requests by port forwarding the requests to the LAN servers and transfers the replies from LAN servers to the requester on the WAN side.

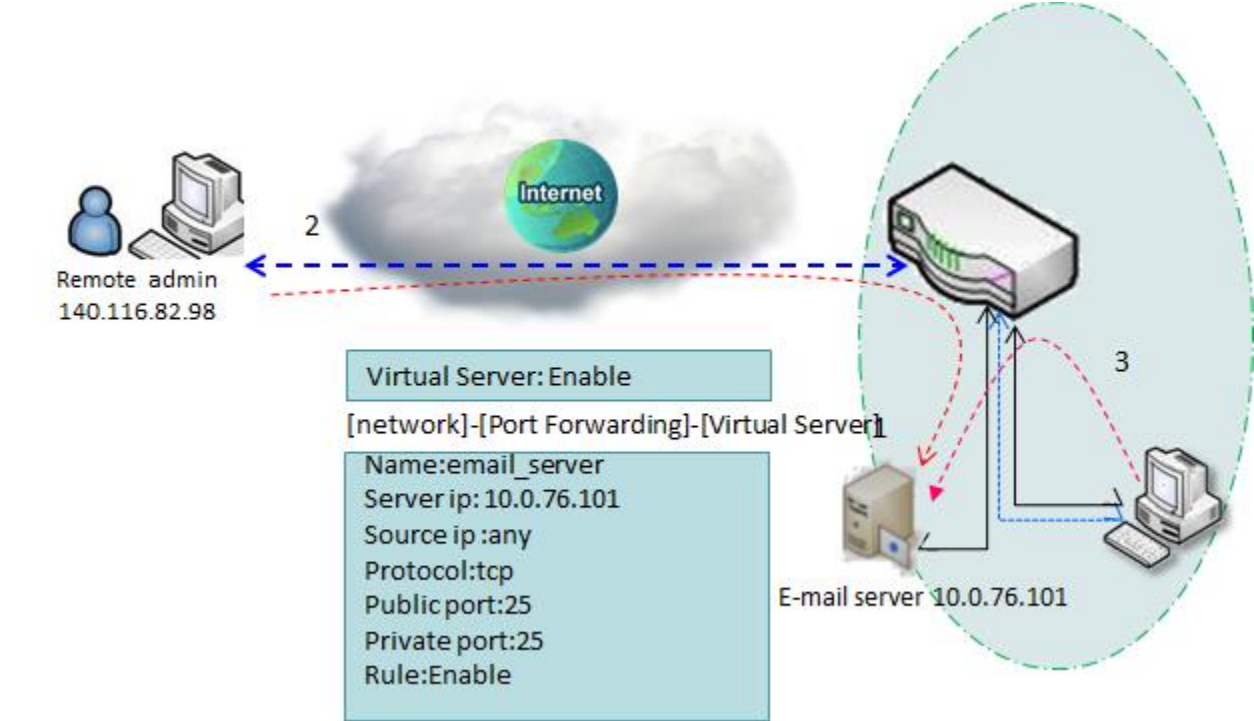

Cellular

Ethernet

Port Forwarding

DDNS

PoE

Virtual Server

Virtual Server

☐ Enable

Add

Save

Virtual Server Item	Value setting	Description
Virtual Server	The box is unchecked by default	Check the Enable box to activate this port forwarding function Click Add will pop-up Virtual Server Rule Configuration page.

4G Multi-Connect PoE Modem

Virtual Server Rule Configuration

Name		
Server IP		
Source IP	Any	
Protocol	TCP(6)	
Public Port	Single Port	
Private Port	Single Port	
Rule	☐ Enable	

Save

Close

Virtual Server Rule Configuration		
Item	Value setting	Description
Name	1. String format can be any text 2. A must-fill setting	The name of current rule
Server IP	A must-fill setting	This field is to specify the IP address of the interface selected in the WAN Interface setting above.
Source IP	1. A must-fill setting 2. By default Any is selected	This field is to specify the Source IP address . Select Any to allow the access coming from any IP addresses. Select Specific IP Address to allow the access coming from an IP address. Select IP Range to allow the access coming from a specified range of IP address.
Protocol	A must-fill setting	When "TCP(6)" is selected It means the option "Protocol" of packet filter rule is TCP. Public Port selected a predefined port from Well-known Service, and Private Port is the same with Public Port number. Public Port is selected Single Port and specify a port number, and Private Port can be set a Single Port number. Public Port is selected Port Range and specify a port range, and Private Port can be selected Single Port or Port Range. <u>Value Range</u>:1 ~ 65535 for Public Port, Private Port. When "UDP(17)" is selected It means the option "Protocol" of packet filter rule is UDP. Public Port selected a predefined port from Well-known Service, and Private Port is the same with Public Port number. Public Port is selected Single Port and specify a port number, and Private Port can be set a Single Port number.

4G Multi-Connect PoE Modem

Public Port is selected Port Range and specify a port range, and Private Port can be selected Single Port or Port Range. <u>Value Range</u>:1 ~ 65535 for Public Port, Private Port. When “TCP(6)& UDP(17)” is selected It means the option “Protocol” of packet filter rule is TCP and UDP. Public Port selected a predefined port from Well-known Service, and Private Port is the same with Public Port number. Public Port is selected Single Port and specify a port number, and Private Port can be set a Single Port number. Public Port is selected Port Range and specify a port range, and Private Port can be selected Single Port or Port Range. <u>Value Range</u>:1 ~ 65535 for Public Port, Private Port. When “User-defined” is selected It means the option “Protocol” of packet filter rule is User-defined. For Protocol Number, enter a port number.		
Rule	1. An optional filled setting 2. The box is unchecked by default.	Check the Enable box to activate the rule.

Rule Name

test

Edit

Delete

Rule Name	Value setting	Description
Item		
Rule name	N/A	Click “ Edit ” button to pop-up Virtual Server Rule Configuration page to edit the rule. Click “ Delete ” button to delete this rule

4G Multi-Connect PoE Modem

3.1.4 DDNS

Cellular

Ethernet

Port Forwarding

DDNS

PoE

Configuration

DDNS

☐ Enable

Provider

DynDNS.org

Host Name

User Name / E-Mail

Password / Key

DDNS Item	Value setting	Description
DDNS	The box is unchecked by default	Check the Enable box to activate this function.
Provider	DynDNS.org is set by default	Select your DDNS provider of Dynamic DNS. It can be DynDNS.org , NO-IP.com etc...
Host Name	1. String format can be any text 2. A Must-fill setting	Your registered host name of DDNS Service. <i>Value Range:0 ~ 63 characters.</i>
User Name / E-Mail	1. String format can be any text 2. A Must-fill setting	Enter your User name or E-mail addresss ofDDNS Service.
Password / Key	1. String format can be any text 2. A Must-fill setting	Enter your Password or Key ofDDNS Service.

4G Multi-Connect PoE Modem

3.1.5 PoE

Cellular

Ethernet

Port Forwarding

DDNS

PoE

PoE Port Definition

PoE Port1	Edit
PoE Port2	Edit

PoE Port1

PD Ping Check	☐ Enable
Time Schedule	(0) Always ▾
Enable	☒

Save

Close

PoE Port1

PD Ping Check	☒ Enable IP: 0.0.0.0 Timeout: 0 Sec (10~300)
PD No-response Action	No Action ▾
Time Schedule	(0) Always ▾
Enable	☒

Save

Close

4G Multi-Connect PoE Modem

PoE Port1

PD Ping Check

☒ Enable
IP: 0.0.0.0
Timeout: 0 Sec (10~300)

PD No-response Action

No Action

Power Off/On

No Action

(0) Always

Time Schedule

Enable


☒

Save

Close

PoE Port Definition		
Item	Value setting	Description
Port-1	The box is unchecked by default	Check the Enable box to activate PoE function.
PD Ping Check	The box is unchecked (Disable) by default	Check the Enable box to activate PD Ping Check function. In addition to enable the function, you have to specify a timeout value for timeout check. Value Range: 10 ~ 300 seconds.
PD No-response Action	No Action by default	Specify the the action to take when the PD doesn't reply the Ping check activity. (PD No-response).It could be No Action or Power off/on . Select Power off/on to restart the PD device, if required.
Time schedule	(0)Always is set by default	if you have set other schedule rules, there will be other options to select.
Enable	The box is unchecked by default	Check the Enable box to activate PoE function.


3.2 Routing

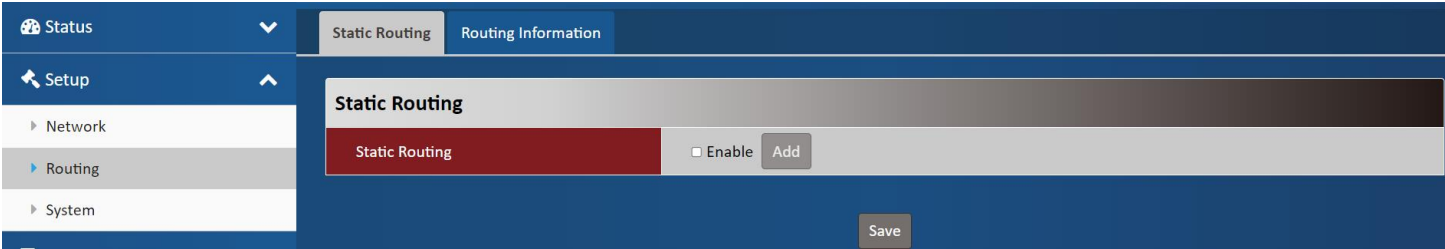

Routing Item	Value setting	Description
Static Routing	The box is unchecked by default	Check the Enable box to activate this function.
Routing Information	N/A	The routing information allows user to view the routing table and policy routing information.

3.2.1 Static Routing

"Static Routing" function lets you define the routing paths for some dedicated hosts/servers or subnets to store in the routing table of the gateway. The gateway routes packets to different peer gateways based on the routing table. You need to define the static routing information in gateway routing rule list.

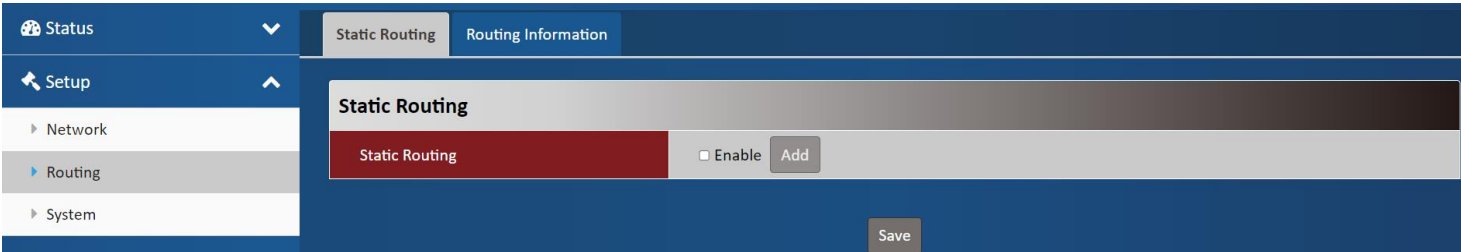

Static Routing Item	Value setting	Description
Static Routing	The box is unchecked by default	Check the Enable box to activate this function. Click Add will pop-up Static Routing Rule Configuration page.

4G Multi-Connect PoE Modem

Static Routing Rule Configuration

Name	
Destination IP	
Subnet Mask	
Gateway IP	
Interface	LAN
Metric	
Rule	☐ Enable

Save

Close

Static Routing Rule Configuration		
Item	Value setting	Description
Name	The box is unchecked by default	Check the Enable box to activate this function. Click Add will pop-up Static Routing Rule Configuration page.
Destination IP	1. IPv4 Format 2. A Must filled setting	Specify the Destination IP of this static routing rule.
Subnet Mask	1.255.255.255.0 (/24) is set by default	Specify the Subnet Mask of this static routing rule.
Gateway IP	1. IPv4 Format 2. A Must filled setting	Specify the Gateway IP of this static routing rule.
Interface	Lan is set by default	Select the Interface of this static routing rule. use the available WAN / LAN interfaces.
Metric	1. Numeric String Format 2. A Must filled setting	The Metric of this static routing rule. <i>Value Range: 0 ~ 255.</i>
Rule	The box is unchecked by default.	Click the Enable to activate static routing functions.

3.2.2 Routing Information

Static Routing	Routing Information
Routing Information	
192.168.123.0	Detail

4G Multi-Connect PoE Modem

Routing Information		
Item	Value setting	Description
192.168.123.0	192.168.123.0 by default	Show default routing and static routing rule list

Routing Information

Destination IP	192.168.123.0
Subnet Mask	255.255.255.0
Gateway IP	0.0.0.0
Interface	LAN
Metric	0

Close

3.3 System

This section provides the configuration of system features.

Status

Setup

Network

Routing

System

Security

Administrator

Logout

System Time

Language

System Information

Scheduling

Data Cap

System Time

Current Time	Thu Dec 7 07:28:19 2023
Sync Time	Auto
Time Zone	(GMT+00:00) Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London
NTP Server	pool.ntp.org
Daylight Saving	☐ Enable
Start Date	1 / 1 / 0 (Month/Day/Hour)
End Date	1 / 1 / 0 (Month/Day/Hour)
Action	Action

Save

3.3.1 System Time

System Time

Language

System Information

Scheduling

Data Cap

System Time

Current Time

Thu Dec 7 07:28:19 2023

Sync Time

Auto

Time Zone

(GMT+00:00) Greenwich Mean Time: Dublin, Edinburgh, Lisbon, London

NTP Server

pool.ntp.org

Daylight Saving

☐ Enable

Start Date

1 / 1 / 0 (Month/Day/Hour)

End Date

1 / 1 / 0 (Month/Day/Hour)

Action

Action

Save

System time		
Item	Value setting	Description
Current Time	N/A	Show the current time of the unit.
Sync Time	1. A must-fillitem. 2. Auto is selected by default.	When select Auto , unit will sync the time via cellular cell, then try to use NTP if cellular cell doesn't provide time information. When select NTP , the unit will sync time via ntp service.
Time Zone	1. A must-fillitem. 2. GMT+00 :00 is selected by default.	Select a time zone that this device locates in
NTP Server	1. A must-fillitem.	Indicate which NTP server will be used of the time synchronization.
Daylight Saving	1. It is an optional item. 2. Un-checked by default	Check the Enable button to activate the daylight saving function. When user enabled this function, user has to specify the Start Date and End Date for the daylight saving time duration.
Start Date	1. It is an optional item.	Start time for Daylight Saving.
End Date	1. It is an optional item.	End Time of Daylight Saving.
Action	N/A	Click Action to sync time immediately

4G Multi-Connect PoE Modem

3.3.2 Language

System Time

Language

System Information

Scheduling

Data Cap

Configuration

Language List

English

Save

Configuration Item	Value setting	Description
Language List	1. A must-fillitem. 2.English is selected by default.	Language setiing of the WebGUI.

3.3.3 System Information

System Information

Model Name	DWM-314-TP A1
Serial Number	ZZ24800027
Device Up-Time	Oday 0hr 15min 3sec

System Information Item	Value setting	Description
Model Name	N/A	Show the model name of the device

3.3.4 Scheduling

System Time

Language

System Information

Scheduling

Data Cap

Time Schedule

Time Schedule

Add

Time Schedule Item	Value setting	Description
Time Schedule	N/A	Press Add to create a schedule rule for system.

4G Multi-Connect PoE Modem

Time Schedule Configuration

Rule Name

Rule Policy

Inactivate

The Selected Days and Hours Below.

Time Period Definition

Week Day

Every Day

Start Time (hh:mm)

End Time (hh:mm)

Save

Close

Time Schedule Configuration		
Item	Value Setting	Description
Rule Name	String: any text	Set rule name
Rule Policy	Default Inactivate	Inactivate/activate the function been applied to in the time period below

Time Period Definition		
Item	Value Setting	Description
Week Day	Select from menu	Select everyday or one of weekday
Start Time	Time format (hh :mm)	Start time in selected weekday
End Time	Time format (hh :mm)	End time in selected weekday

4G Multi-Connect PoE Modem

3.3.5 Data Cap

System Time

Language

System Information

Scheduling


Data Cap

Configuration


Data Cap	☐ Enable
SIM	SIM-A
Amount	20 GB
Warning Ratio (%)	100%
Reset Date monthly	10
Current Ratio (%)	0
Send SMS	☐ Enable
Phone Number	

Configuration		
Item	Value Setting	Description
Data Cap	Un-Checked by default.	Check the Enable box to activate the Data cap function.
SIM	SIM A by default.	Specify SIMA or SIMB
Amout	1. An Optional setting.	Specify the allowable data limitation for the defined cycle period
Warning Ratio(%)	100% by default.	Send a notification when a set condition is met
Reset Date monthly	1.10by default. 2. An Optional setting.	Specify a certain day of each month as the periodic execution of reset data
Current Ratio(%)	0 by default	
Send SMS	Un-Checked by default.	Check the Enable box to activate the connection restriction function.
Phome Number	1. An Optional setting.	When send smsEnable,canSet the sending SMS object

Chapter 4 Security

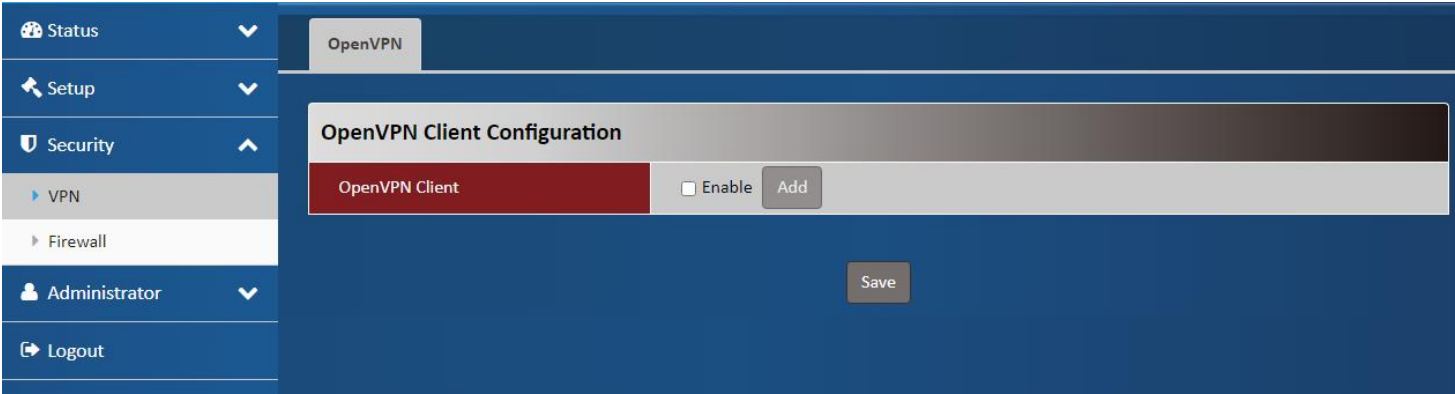


4.1 VPN

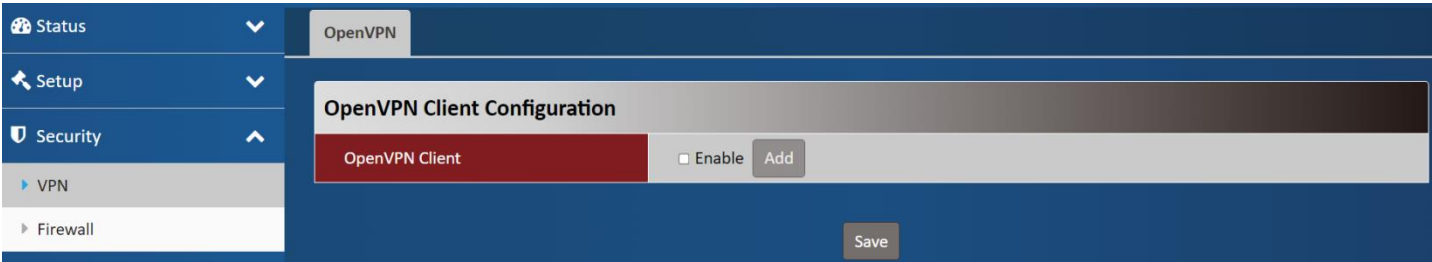

VPN Page Item	Value setting	Description
OpenVPN	N/A	The OpenVPN setting allows user to create and configure OpenVPN tunnels.

4.1.1 OpenVPN

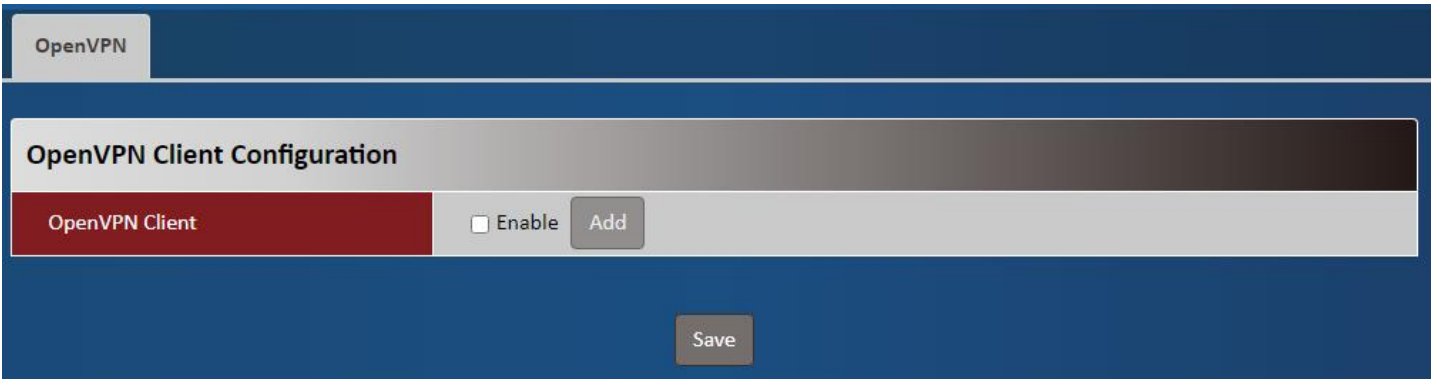

4G Multi-Connect PoE Modem

OpenVPN client name	Page Item	Value setting	Description
OpenVPN client		The box is unchecked by default	Check the Enable box to activate this port forwarding function Click Add, OpenVPN Client Rule Configuration page will pop-up.

OpenVPN Client Rule Configuration



Name	OpenVPN Client #1	
Protocol	TCP	Port: 4430
Tunnel Scenario	TAP	
Remote IP/FQDN	60.249.211.108	
Remote Subnet	192.168.100.100	255.255.255.0 (/24)
Redirect Internet Traffic	☐ Enable	
CA Cert	hRyIHOQhQ== -----END CERTIFICATE-----	
Client Cert	UA== -----END CERTIFICATE REQUEST-----	
Client Key	lv4fXUZA1ssMXoV2lwpXWoOStYRR2ChLK0drfaeJCA= -----END RSA PRIVATE KEY-----	
Encryption Cipher	AES-256	
Hash Algorithm	SHA-1	
LZO Compression	Adaptive	
Persist Key	☐ Enable	
Persist Tun	☐ Enable	
Additional Configuration		
Tunnel	☒ Enable	

Save
Close


4G Multi-Connect PoE Modem

OpenVPN Client Rule Configuration Page		
Item	Value setting	Description
Name	1. String format can be any text 2. A must-fill setting	The name of current rule
Protocol	1. A must-fill setting 2. By default TCP is selected.	Define the selected Protocol for connecting to the OpenVPN Server. • Select TCP , or UDP -> The TCP protocol will be used to access the OpenVPN Server, and Port will be set as 4430 automatically. • Select UDP -> The UDP protocol will be used to access the OpenVPN Server, and Port will be set as 1194 automatically.
Tunnel Scenario	1. A must-fill setting 2. By default is selected.	Specify the type of TunnelScenario for connecting to the OpenVPN Server. It can be TUN for TUN tunnel scenario, or TAP for TAP tunnel scenario.
Remote IP/FQDN	A must-fill setting	Specify the Remote IP/FQDN of the peer OpenVPN Server for this OpenVPN Client tunnel. Fill in the IP address or FQDN.
Remote Subnet	1. An optional setting. 2. The box is unchecked by default.	Check the Enable box to activate remote subnet function, and specify Remote Subnet of the peer OpenVPN Server for this OpenVPN Client tunnel. Fill in the remote subnet address and remote subnet mask.
Redirect internet traffic	1. An optional setting. 2. The box is unchecked by default.	Check the Enable box to activate the Redirect Internet Traffic function.
CA Cert	A must-fill setting	Paste the CA Cert static key
Client Cert	A must-fill setting	Paste the Client Cert static key
Client key	A must-fill setting	Paste the Client Key static key
Encryption Cipher	1. A must-fill setting. 2. By default AES-256 is selected.	Specify the Encryption Cipher from the dropdown list. It can be AES-256/AES-192/AES-128/None .
Hash Algorithm	By default SHA-1 is selected.	Specify the Hash Algorithm from the dropdown list. It can be SHA-1/MD5/MD4/SHA2-256/SHA2-512/None/Disable .
LZO Compression	By default Adaptive is selected.	Specify the LZO Compression scheme.
Persist Key	1. An optional setting. 2. The box is checked by default.	Check the Enable box to activate the Persis Key function.
Persist Tun	1. An optional setting. 2. The box is checked by default.	Check the Enable box to activate the Persis Tun function.
Additional Configuration	1. An optional setting. 2. String format: any text	Specify the Additional Configuration .
Tunnel	The box is unchecked by default.	Click the Enable to activate OpenVPN functions.

4.2 Firewall

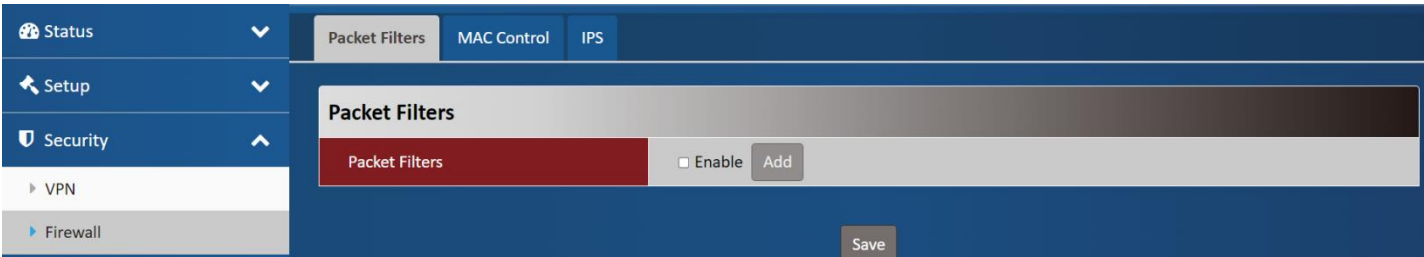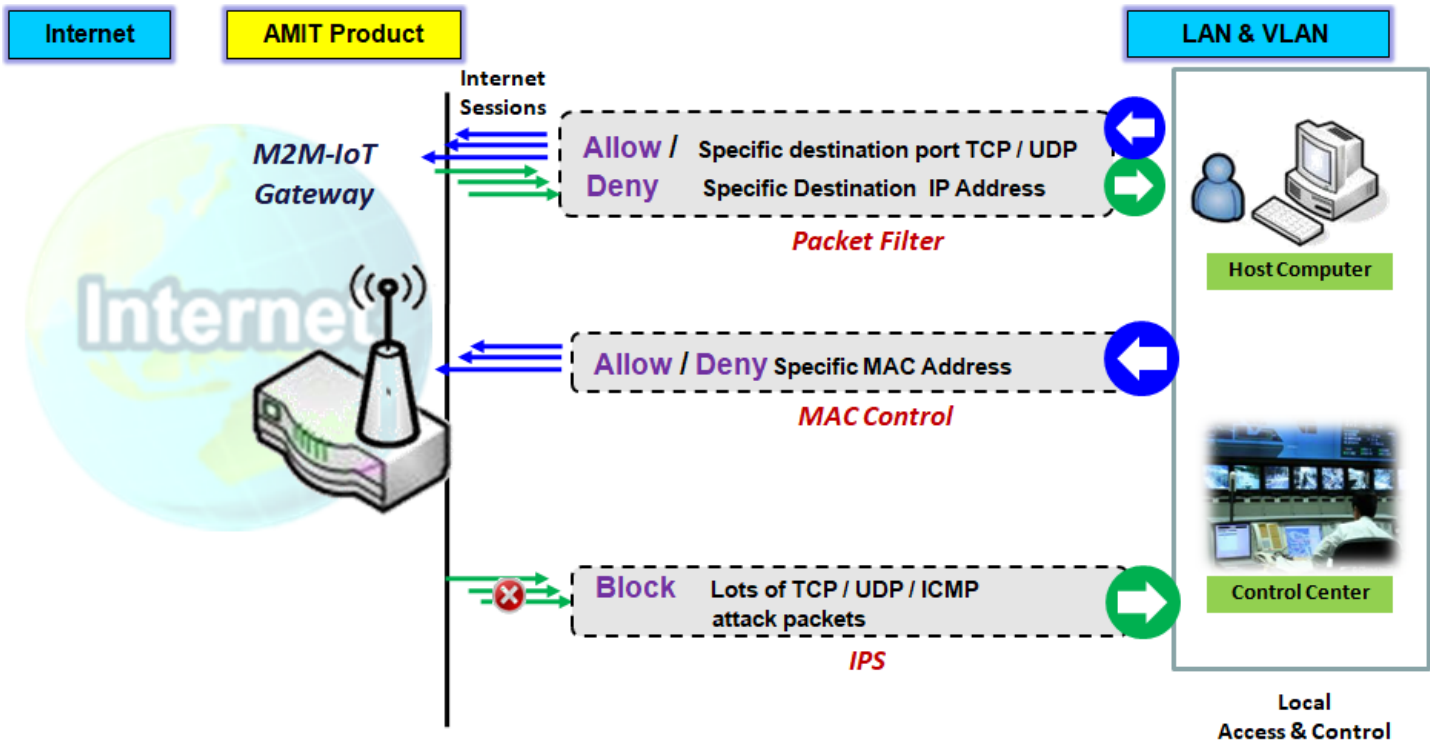

4.2.1 Packet Filters

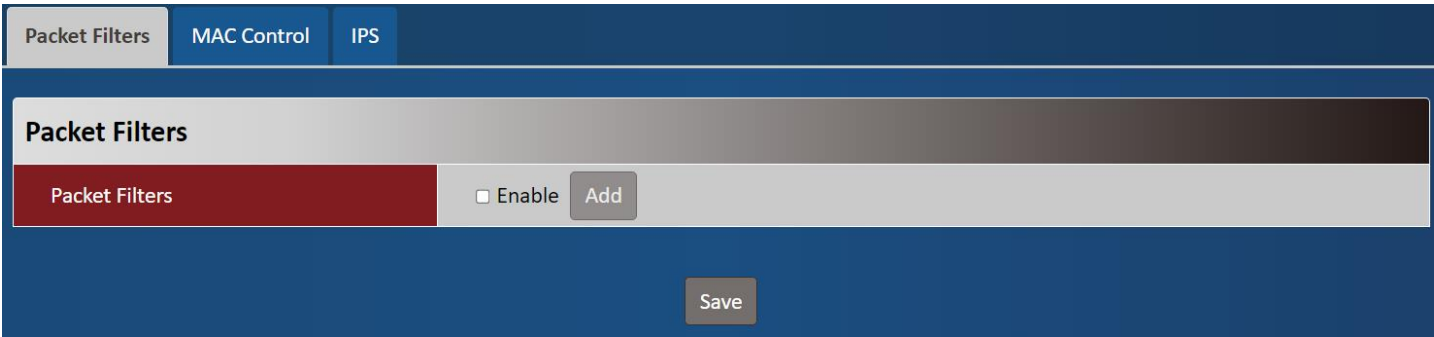

Packet Filters		
Item	Value setting	Description
Packet Filters	The box is unchecked by default	Check the Enable box to activate this Packet Filter function Click Add will pop-up Packet Filter Rule Configuration page

4G Multi-Connect PoE Modem

Packet Filter Rule Configuration

Name	test
Source IP	IP Range 192.168.123.200 - 192.168.123.250
Destination IP	Specific IP Address 195.165.124.33
Source Interface	Any
Destination Interface	Any
Source MAC	AA:BB:CC:EE:DD:FF
Protocol	Any
Source Port	Any
Destination Port	Single Port 80
Time Schedule	(0) Always
Rule	☒ Enable

Save

Close

Packet Filter Rule Configuration		
Item	Value setting	Description
Name	1. String format can be any text 2. A must-fill setting	Enter a packet filter rule name. Enter a name that is easy for you to remember.
Source ip	1. A must-fill setting 2. By default Any is selected	This field is to specify the Source IP address . Select Any to filter packets coming from any IP addresses. Select Specific IP Address to filter packets coming from an IP address. Select IP Range to filter packets coming from a specified range of IP address.
Destination IP	1. A must-fill setting 2. By default Any is selected	This field is to specify the Destination IP address . Select Any to filter packets that are entering to any IP addresses. Select Specific IP Address to filter packets entering to an IP address entered in this field. Select IP Range to filter packets entering to a specified range of IP address entered in this field.
Source Interface	1. A must-fill setting 2. By default Any is selected	Define the selected interface to be the packet-entering interface of the router. If the packets to be filtered are coming from LAN to WAN then select LANfor this field. Select Any to filter packets coming into the router from any interfaces.

4G Multi-Connect PoE Modem


Destination interface	1. A must-fill setting 2. By default, Any is selected	Define the selected interface to be the packet-leaving interface of the router. If the packets to be filtered are entering from LAN to WAN then select WAN for this field. Select Any to filter packets leaving the router from any interfaces.
Source MAC	1. optional	Specify the Source MAC address .
Protocol	1. A must-fill setting 2. By default Any is selected	For Protocol , select Any to filter any protocol packets For Protocol , select TCP to filter tcp packets For Protocol , select UDP to filter udp packets For Protocol , select both to filter both packets For Protocol , select ICMP to filter ICMP packets For Protocol , select GRE to filter GRE packets For Protocol , select AH to filter AH packets For Protocol , select ESP to filter ESP packets For Protocol , select SCT to filter SCT packets
Source port	1. A must-fill setting 2. By default Any is selected	This field is to specify the Source port . Select Any to filter packets coming from any port. Select single port to specify a unique port for the packets come to the port. Select port range to filter packets coming from a specified range of port.
Destination port	1. A Must-fill setting 2. By default Any is selected	This field is to specify the destination port . Select Any to filter packets coming from any port. Select single port to filter a unique port for the packets come to the port. Select port range to filter packets with a specified destination port range.
Time schedule	1. An optional filled setting 2. (0) Always is selected by default.	Apply Time Schedule to this rule; otherwise leave it as (0) Always.
Rule	The box is unchecked by default	Check the Enable box to activate this Packet Filter function

4G Multi-Connect PoE Modem

4.2.2 MAC Control

When the administrator wants to reject the traffics from some client hosts with specific MAC addresses, he can use the "MAC Control" function to reject with the black list configuration.

Mac control Scenario

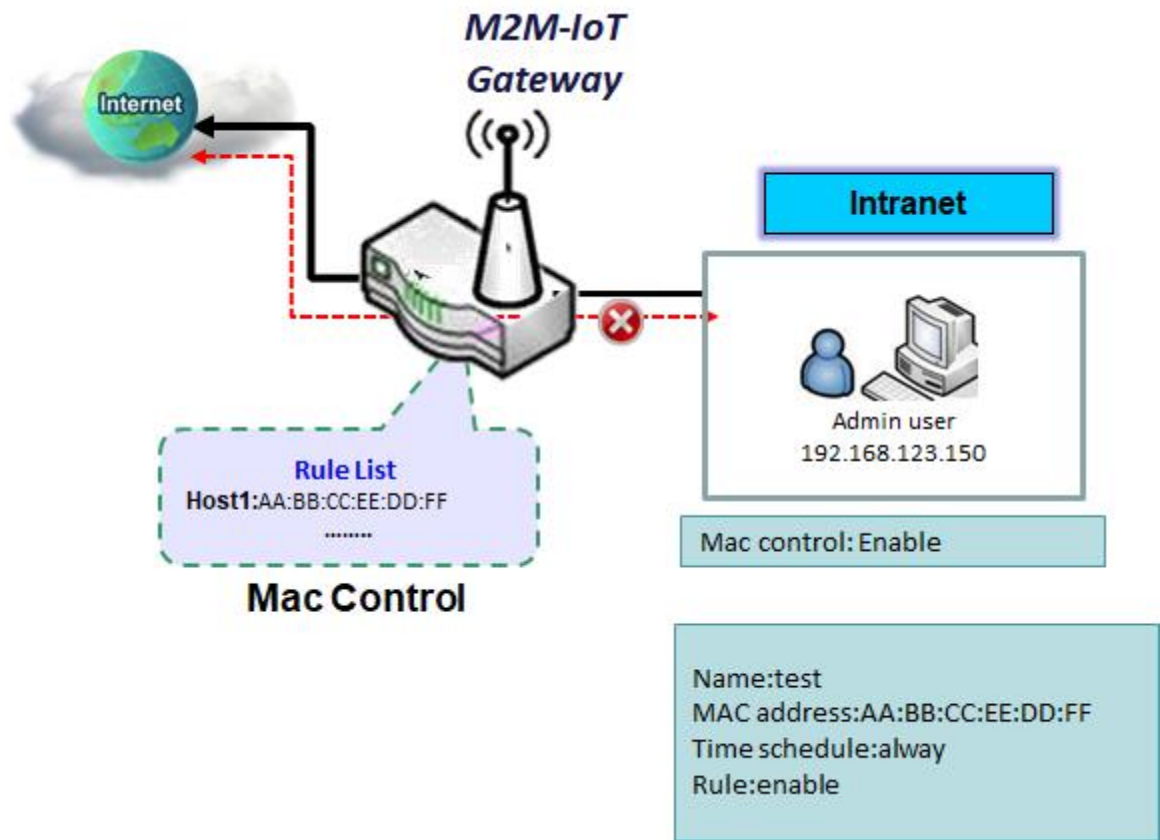

Packet Filters

MAC Control

IPS

MAC Control

MAC Control

☐ Enable

Add

Save

MAC Control Item	Value setting	Description
MAC Control	The box is unchecked by default	Check the Enable box to activate this MAC control function Click Add will pop-up MAC control Rule Configuration page

4G Multi-Connect PoE Modem

MAC Control Rule Configuration

Name	test
MAC Address	AA:BB:CC:EE:DD:FF
Time Schedule	(0) Always ▾
Rule	☒ Enable

Save

Close

Mac Control Rule Configuration		
Item	Value setting	Description
Name	1. String format can be any text 2. A must-fill setting	Enter a MAC rule name. Enter a name that is easy for you to remember.
MAC address	Blank is set by default	Specify the Source MAC Address to filter rule.
Time Schedule	1. An optional filled setting 2. (0)Always is selected by default.	Apply Time Schedule to this rule; otherwise leave it as (0) Always.
Rule	The box is unchecked by default	Check the Enable box to activate this MAC control function

4G Multi-Connect PoE Modem

4.2.3 IPS

Packet Filters

MAC Control

IPS

IPS

IPS	☐ Enable
SYN Flood Defence	☐ Enable
SYN Flood Threshold	0 (100~10000)
Ping Flood Defence	☐ Enable
Ping Flood Threshold	0 (100~10000)
UDP Flood Defence	☐ Enable
UDP Flood Threshold	0 (100~10000)
Block Smurf Attack	☐ Enable
Block Land Attack	☐ Enable
Block Fraggle Attack	☐ Enable
Block Ping Of Death Attack	☐ Enable
Block Traceroute	☐ Enable

Save

IPS Page Item	Value setting	Description
IPS	The box is unchecked by default	Check the Enable box to activate this IPS function
SYN Flood Defense	The box is unchecked by default	Check the Enable box to activate this SYN Flood Defensefunction
SYN Flood Threshold	1. A must-fill setting 2. Traffic threshold is set to 0 by default 3. The value range can be from 100 to 10000.	Specify the value range to block
Ping Flood Defence	The box is unchecked by default	Check the Enable box to activate this Ping Flood Defencefunction
Ping Flood Threshold	1. A must-fill setting 2. Traffic threshold is set to 0 by default	Specify the value range to block

4G Multi-Connect PoE Modem

	3. The value range can be from 100 to 10000.	
UDP Flood Defence	The box is unchecked by default	Check the Enable box to activate this UDP Flood Defencefunction
UDP Flood Threshold	1. A Must-fill setting 2. Traffic threshold is set to 0 by default 3. The value range can be from 100 to 10000.	Specify the value range to block
Block Smurf Attack	The box is unchecked by default	Check the Enable box to activate this Block Smurf Attackfunction
Block Land Attack	The box is unchecked by default	Check the Enable box to activate this Block Land Attackfunction
Block Fraggle Attack	The box is unchecked by default	Check the Enable box to activate this Block FraggleAttackfunction
Block Ping Of Death Attack	The box is unchecked by default	Check the Enable box to activate this Block Ping Of Death Attackfunction
Block Traceroute	The box is unchecked by default	Check the Enable box to activate this Block Traceroutefunction

Chapter 5 Administrator

5.1 Manager

Status

Setup

Security

Administrator

Manager

Utility

Logout

FW Upgrade

Password & MMI

Reboot & Reset

SSH

Remote Administrator

Device Management

Firmware Information

FW Version

00009W0.NB1_eB1.0000_11201800

FW Date

2023/11/20

Firmware Upgrade

FW Path

選擇檔案 未選擇任何檔案

Upgrade Action

Upgrade

5.1.1 FW Upgrade

Firmware Information	
FW Version	00009W0.NB1_eB1.0000_11201800
FW Date	2023/11/20

Firmware Information		
Item	Value setting	Description
FW Version	N/A	It displays the firmware version of the product
FW Date	N/A	It displays the build time of the firmware

Firmware Upgrade	
FW Path	選擇檔案 未選擇任何檔案
Upgrade Action	Upgrade

Firmware Upgrade		
Item	Value setting	Description
FW Path	N/A	Select firmware file to be upgraded
Upgrade Action	N/A	Click Upgrade button to start upgrade process with selected FW

4G Multi-Connect PoE Modem

Backup Configuration Settings

Backup Configuration Settings

Download

Via Web UI

Backup Configuration Settings Item	Value setting	Description
Backup Configuration Settings	Download is selected by default	You can backup or restore the device configuration settings by clicking the Via Web UI button. Download: for backup the device configuration to a config.bin file. Upload: for restore a designated configuration file to the device. Via Web UI: to retrieve the configuration file via Web GUI.

5.1.2 Password & MMI

Username

Username

New Username

admin

Username Item	Value Setting	Description
Username	1. The default username is 'admin'.	Display the current username for the administrator
New Username	String: any text	Enter the new username

Password

Old Password

New Password

New Password Confirmation

(NOTE: Minimum 10 characters, 1 capital and 1 lower case letter and 1 numeric number.)

Password Item	Value Setting	Description
Old Password	1. String: any text 2. The default password for web-based MMI is 'admin'.	Enter the current password to enable you unlock to change password.
New Password	String: any text	Enter new password
New Password Confirmation	String: any text	Enter new password again to confirm

4G Multi-Connect PoE Modem

MMI	
Login	Password-Guessing Attack & MAX: 3 (times)
Login Timeout	☒ Enable 300 (seconds)
GUI Access Protocol	http/https

MMI Item	Value setting	Description
Login	3 times is set by default	Enter the login trial counting value. <u>Value Range:</u> 3 ~ 10. If someone tried to login the web GUI with incorrect password for more than the counting value, an warning message <i>"Already reaching maximum Password-Guessing times, please wait a few seconds!"</i> will be displayed and ignore the following login trials.
Login Timeout	The Enable box is checked, and 300 is set by default.	Check the Enable box to activate the auto logout function, and specify the maximum idle time as well. <u>Value Range:</u> 30 ~65535.
GUI Access Protocol	http/https is selected by default.	Select the protocol that will be used for GUI access. It can be http/https , http only , or https only .

5.1.3 Reboot & Reset

FW Upgrade	Password & MMI	Reboot & Reset	SSH	Remote Administrator	Device Management
------------	----------------	----------------	-----	----------------------	-------------------

System Operation

Reboot	Now Reboot
Reset to Default	Reset

System Operation Item	Value setting	Description
Reboot	Now is selected by default	Click the Reboot button to reboot the gateway immediately or on a pre-defined time schedule. Now: Reboot immediately Time Schedule: Select a pre-defined auto-reboot time schedule rule to reboot
Reset to Default	N/A	Click the Reset button to reset the device configuration to its default value.

4G Multi-Connect PoE Modem

5.1.4 SSH

FW Upgrade

Password & MMI

Reboot & Reset

SSH

Remote Administrator

Device Management

Configuration

SSH

LAN ☒ Enable WAN ☐ Enable Service Port : 22

Save

SSH Item	Value Setting	Description
SSH	1. Default value is disable such service 1. By default Service Port is 22.	Check the Enable box to activate the SSH Telnet function for connecting from LAN or WAN interfaces. You can set which number of Service Port you want to provide for the corresponding service. Value Range: 1 ~65535.

5.1.5 Remote Administrator

FW Upgrade

Password & MMI

Reboot & Reset

SSH

Remote Administrator

Device Management

Remote Administrator Host Definition

Remote Administrator Host Definition

Add

Remote Administrator Host Definition Item	Value setting	Description
Remote Administrator Host Definition	N/A	Press “Add” to set a remote administrator rule

4G Multi-Connect PoE Modem

Rule Configuration	
Name	
Protocol	HTTP ▼
Remote IP	Any IP ▼
Subnet Mask	255.0.0.0 (/8) ▼
Service Port	80
Rule	☐ Enable

Rule Configuration		
Item	Value setting	Description
Name	String: any text	Set rule name
Protocol	HTTP is set by default	Select HTTP or HTTPS method for router access.
Remote IP	A must-fill setting Any IP by default	This field is to specify the remote host to assign access right for remote access. Select Any IP to allow any remote hosts Select Specific IP to allow the remote host coming from a specific subnet.
Subnet Mask	255.0.0.0/8 by default	When Select Specific IP to allow the remote host coming from a specific subnet.
Service Port	1. 80 for HTTP by default	This field is to specify a Service Port to HTTP or HTTPS connection.
Rule	The box is unchecked by default.	Click Enable box to activate this rule.

5.1.6 Device Management

Configuration	
Device Management	☐ Enable
Input Service URL	
Input Server IP STUN traffic	
Self-Certification	☒ Enable

Configuration		
Item	Value setting	Description
Device management	The box is unchecked	Check the Enable box to activate this Device management function

4G Multi-Connect PoE Modem

	by default	
Input service URL	Blank is set by default	Specify ANMS service domain nameURL
Input server IP STUN traffic	Blank is set by default	Specify ANMS serverpublicip or domain name
Self-certiffcation	The Enable box is checked by default	Check the Enable box to activate this Self-certiffcation function

5.2 Utility

Status

Setup

Security

Administrator

Manager

Utility

Logout

SMS

SMS Service

SMS

SMS Storage

Free Space

Event Management

SMS Forward Management

Enable

SIM

0

(0-10)

Enable

Edit

Enable

Edit

5.2.1 SMS

SMS Service

SMS

SMS Storage

Free Space

Event Management

Message Prefix

Enable

SIM

0

(0-10)

Enable

Edit

Enable

SMS service Item	Value Setting	Description
SMS	The box is unchecked by default	Check the Enable box to activate this SMS function Click Add will pop-up MAC control rule configuration page
SMS storage	SIM by default	Select SIM or modem storage
Free space	0 by default	pecify a number (1-10) for message count to reserve some available storage space and prevent it from run out of storage.
Even management	The box is unchecked by default	Check the Enable box to activate this SMS function Click edit will pop-up account configuration page
Message Prefix	The box is unchecked by	Click the Enable box to enable the SMS prefix for validating the received

4G Multi-Connect PoE Modem

default	SMS. Once the function is enabled, you have to enter the prefix behind the checkbox. The received managing events SMS must have the designated prefix as an initial identifier, then corresponding handlers will become effective for further processing.
---------	--

Account Configuration

Phone Number#1

Application

☐ Managing ☐ Notifying

Enable

☐

Phone Number#2

Application

☐ Managing ☐ Notifying

Enable

☐

Managing Events

Cellular Status

☐ Enable

Cellular Reconnect

☐ Enable

Reboot

☐ Enable

Notifying Events

Cellular Connected

☐ Enable

Save

Close

Account Configuration		
Item	Value Setting	Description
Phone number#1	The box is unchecked by default	Sender Phone Number for the received SMS
Application	The box is unchecked by default	Check the Enable box to activate this SMS function
Enable	The box is unchecked by default	Check the Enable box to activate this SMS function
Phone number#2	The box is unchecked by default	Sender Phone Number for the received SMS
Application	The box is unchecked by default	Check the Enable box to activate this Managing Event function
Enable	The box is unchecked by	Check the Enable box to activate this SMS function

4G Multi-Connect PoE Modem

default

Managing Event Item	Value Setting	Description
Cellular Status	The box is unchecked by default	Enable the option and user can query the current connection status via sending SMS " status " from specify phone number which enables managing function.
Cellular Reconnect	The box is unchecked by default	Enable the option and user can force the current connection re-econnect once via sending SMS " reconnect " from specify phone number which enables managing function.
Reboot	The box is unchecked by default	Enable the option and user can force the device reboot once via sending SMS " reboot " from specify phone number which enables managing function.

Notifying Events Item	Value setting	Description
Cellular Connected	The box is unchecked by default	Enable the option will send a SMS to show " WAN Link UP-IP:xxx.xxx.xxx.xxx " to specify phone number which enable Notifying function when cellular WAN establishes a connaction.

SMS Summary

New SMS	0	
Received SMS	0	
Action	New SMS SMS Inbox	

SMS Summary Item	Value setting	Description
New SMS	N/A	show new SMS number
Received SMS	N/A	show Received SMS number
Action	N/A	Click new SMS will pop-upnewsms page Click sms inbox will pop-up sms inbox page

4G Multi-Connect PoE Modem

New SMS

Receiver

(Use '+' for International Format and ';' to Compose Multiple Rec eivers)

Text Message

Current Input Length: 0/512

Action

Send

Clear

Close

New SMS		
Item	Value setting	Description
Remote Administrator Host Definition	N/A	Write the receivers to send SMS. User need to add the semicolon and compose multiple receivers that can group send SMS.
Text Message	N/A	Write the SMS context to send SMS.
Action		Clickthe Send button, above text message will be sent as a SMS. Clickthe Clear button, toclear text message

SMS Inbox

None

SMS Inbox		
Item	Value setting	Description
none	N/A	read or delete SMS, reply SMS or forward SMS from this screen.

5.2.2 Command Script

Command Script

Command Script

0 / 4096

Enable

☐ Enable

Command Script Item	Value Setting	Description
Command Script	1.An optional setting 2.Any string	Enter a short description for the applied Command Script.
Enable	The box is unchecked by default	Check the Enable box to activate the Command Script function.