



WIRELESS N300 ADSL2+ ROUTER
DSL-2750U

QUICK INSTALLATION GUIDE

CONTENTS OF PACKAGING

CONTENTS



WIRELESS N300 ADSL2+ ROUTER
DSL-2750U



POWER ADAPTER
ADAPTER



ETHERNET CABLE (RJ-45 CABLE)
CONNECT THE ROUTER TO YOUR PC DURING SET-UP



RJ-11 CABLE




SPLITTER



If any of these items are missing from your packaging contact your reseller

PRODUCT SET-UP


DEFAULT SETTING

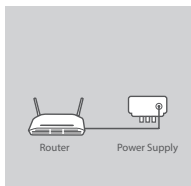

Step 1

Power Adapter Connection


Plug the Power adapter Unit into the wall outlet and then connect the other end of it to the Power port of the router (12VDC IN). Switch on the plug point on.

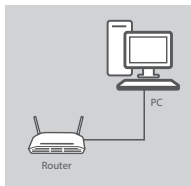

Step 2

LAN connection


Connect the Ethernet LAN cable to any (Yellow) port on the router and connect the other end to the LAN port of the PC.

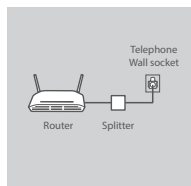

Step 3

DSL Port Connection

Connect the (DSL) port of the Router, using the (gray) telephone cable to the port marked (DSL) on the splitter. Connect the short (Line) cable attached to the splitter to connect the telephone wall socket.

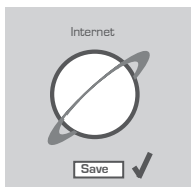

Step 4

From the computer you connected to the router, open a web browser and go to <http://192.168.1.1>. Enter admin as the User Name and Password, and you may use the Setup Wizard to configure your DSL-2750U.

IP ADDRESS: <http://192.168.1.1>

USERNAME: admin

PASSWORD: admin

TROUBLESHOOTING

SETUP AND CONFIGURATION PROBLEMS

1. HOW DO I CONFIGURE MY DSL-2750U ROUTER, OR CHECK MY WIRELESS NETWORK NAME (SSID) AND WIRELESS ENCRYPTION KEY?

- Connect your PC to the router using an Ethernet cable.
- Open a web browser and enter the address <http://192.168.1.1>
- The default username is admin. The default password is admin.
- If you have changed the password and can not remember it, you will need to reset the router to set the password back to admin.

2. HOW DO I RESET MY DSL-2750U ROUTER TO FACTORY DEFAULT SETTINGS?

- Ensure the router is powered on.
 - Press and hold the reset button on the rear of the device for 10 seconds.
- Note: Resetting the router to factory default will erase the current configuration settings. To re-configure your settings, log into the router as outlined in question 1, then run the Setup Wizard.

3. HOW DO I ADD A NEW WIRELESS CLIENT OR PC IF I HAVE FORGOTTEN MY WIRELESS NETWORK NAME (SSID) OR WIRELESS ENCRYPTION KEY?

- Every PC that needs to connect to the router wirelessly, you will need to ensure you use the correct Wireless Network Name (SSID) and encryption key.
- Use the web based user interface (as described in question 1 above) to check or choose your wireless settings.
- Make sure you write down these settings so that you can enter them into each wirelessly connected PC. You will find a dedicated area on the back of this document, this important information for future use.

4. WHY CAN I NOT GET AN INTERNET CONNECTION?

For ADSL users please contact your ISP to make sure the service has been enabled/connected by your ISP and that your ISP username and password is correct.

TECHNICAL SUPPORT

You can find software updates and user documentation on the D-Link website.

Tech Support for customers in

India:

Tel: +91-832-2856000

Toll Free 1860-233-3999

Web: www.dlink.co.in

E-Mail: helpdesk@in.dlink.com

NOTES

NOTES

